


SAFETY RAILS™

USER INSTRUCTIONS

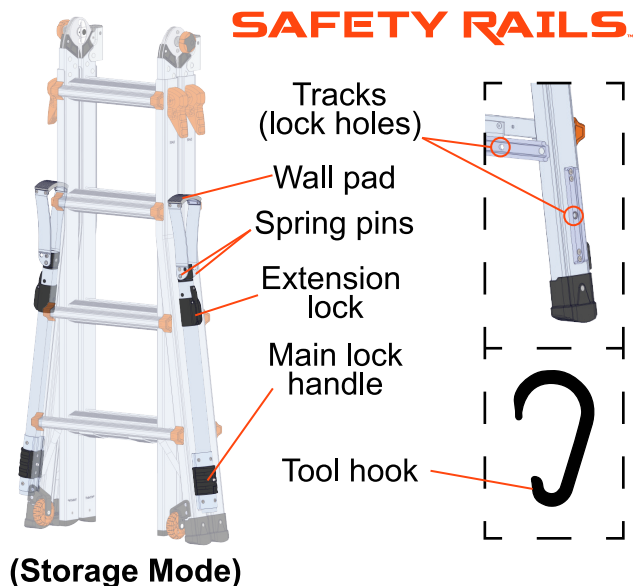

Scan QR code to view safety/instructional video



DANGER

Read and follow all instructions on **SAFETY RAILS** and on ladder. FAILURE TO DO SO COULD RESULT IN INJURY OR DEATH.



(Walkthrough Mode)



(Standoff Mode)

INSTALLATION:

1. Squeeze and hold main lock handle to retract locking pin.
2. Slide SAFETY RAILS arm on track and into desired position (walk-through, standoff or storage).
3. Release handle and slide arm into position until pin fully locks inside hole.




WARNING


Make sure arms are fully locked before use. Never attempt to adjust or reposition **SAFETY RAILS** while in use. Only use **SAFETY RAILS** on **LITTLE GIANT** ladders with factory-installed tracks.



To unlock:

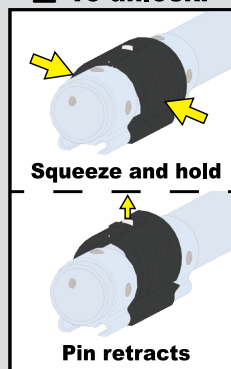

To lock:

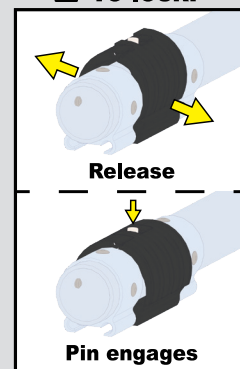

MAIN LOCK HANDLES


WALKTHROUGH MODE:

1. With ladder in its straight ladder mode and laid on ground, install arms to siderail tracks, extending past top of ladder. NOTE: Slide arms onto track at end away from ladder's feet (Fig. A).
2. Use extension locks to extend arms until they are fully extended (Fig. B).
3. Make sure main lock handles and extension locks are fully locked before use. Main lock handle alignment can be confirmed with labels on ladder's rail (Fig. C).
4. Set ladder up as described on ladder's labels, but with top rung at or just below top support point (Fig. D).
5. Grip **SAFETY RAILS** firmly as you reach top of ladder, and as you step through onto roof or elevated platform.
6. When remounting ladder from above, hold **SAFETY RAILS** and turn to face ladder before descending.


IMPORTANT: To remove arms from walkthrough mode, you must lift up slightly to disengage safety lock feature before unlocking main lock handles.




To unlock:

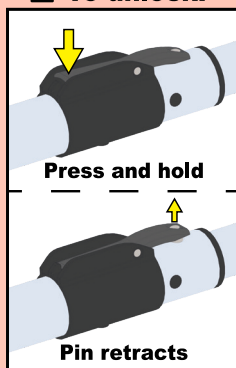


To lock:

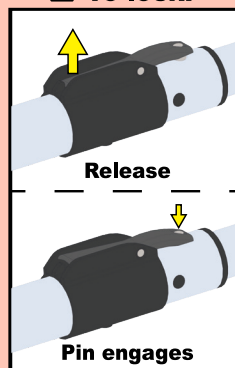


EXTENSION LOCKS

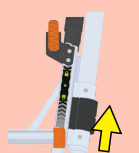

 
A. Slide on toward foot



B. Fully extend

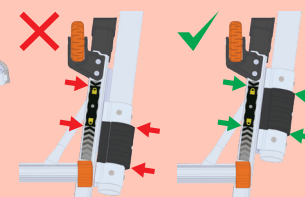

C. Confirm lock alignment

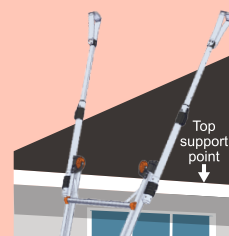


D. Set top rung at or just below top support point



WARNING

Never lean ladder with **SAFETY RAILS** contacting wall in this mode. Do not stand on top two rungs without **SAFETY RAILS** arms installed in walkthrough mode, and never work from top two rungs. **YOU CAN LOSE YOUR BALANCE.** **SAFETY RAILS** are for stability only. Do not lean, push or pull on them, which can cause ladder to move.

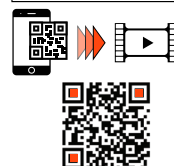


STANDOFF MODE:

1. Before setting ladder up, install arms to horizontal track, extending out sides of ladder (Fig. A).
2. Use extension locks to extend arms to desired width (Fig. B).
3. Rotate wall pads 90-degrees into use position (Fig. C).
4. Make sure spring pins and extension locks are fully locked before setting up ladder as described on ladder's labels (Fig. D).




A. Install arms

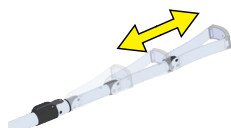



B. Extend to desired length



C. Rotate wall pads in

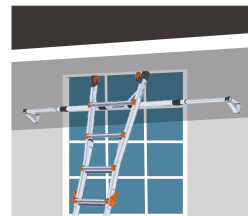

D. Set ladder up

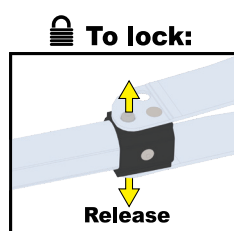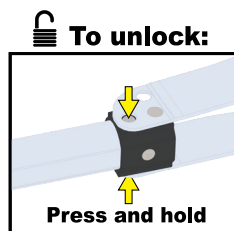


SPRING PINS

TOOL HOOKS



MAX. LOAD
15 lb [6.8 kg]

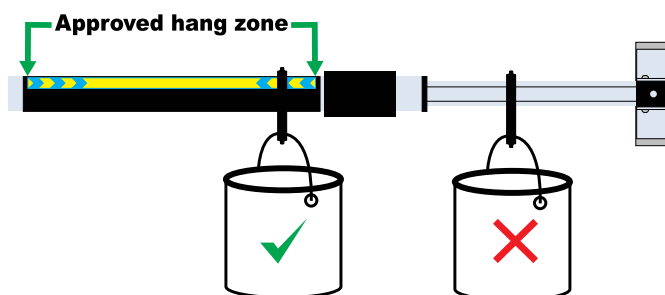

WARNING

Do not over-reach when using **SAFETY RAILS** in this mode. Keep body centered between ladder side rails. When hanging tools from **SAFETY RAILS**, keep inside approved hang zone and never exceed 15 lb [6.8 kg] per arm. Little Giant Ladder Systems is not liable for any damage or injury that may occur from falling items.

MAINTENANCE:

1. Keep SAFETY RAILS clean.
2. Keep in storage position attached to ladder when not in use.
3. Store where dry and protected from unsafe materials, impact, or corrosion damage.
4. Lubricate with a dry lubricant at least every six months, and prior to long term storage, or more often as use dictates, and under extreme weather conditions. Wipe off any excess with a clean, dry rag.

Little Giant Limited 1-Year Warranty Terms and Conditions

Little Giant Ladder Systems warrants each new product to the original purchaser thereof, to be free from defects in workmanship and materials when operated under normal conditions and maintained properly. This warranty covers all parts of the product, and shall be in lieu of any other warranty, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose.

In the unlikely event that within the warranty period from the date of the original purchase, there is a problem caused by defects in either workmanship or materials, Little Giant Ladder Systems will repair or replace, at its option and without cost to the original purchaser. All freight to and from the factory is to be paid by the customer. If a replacement is necessary and your product is no longer available, a comparable product will be substituted.

The liability of Little Giant Ladder Systems under this warranty shall be limited solely to the repair or replacement of the product within the warranty period. Little Giant Ladder Systems shall not be liable, under any circumstances, for consequential or incidental damages, including, but not limited to, personal injury or labor costs. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Under no circumstances will Little Giant Ladder Systems be responsible for any expense in connection with any repairs made by anyone other than the factory or authorized service provider, unless such repairs have been specifically authorized in writing by Little Giant Ladder Systems. This warranty applies only to North America. Manufacturing specifications are subject to change without notice.